


End Point LED Illuminator Specifications And Installation Instructions

Master Unit

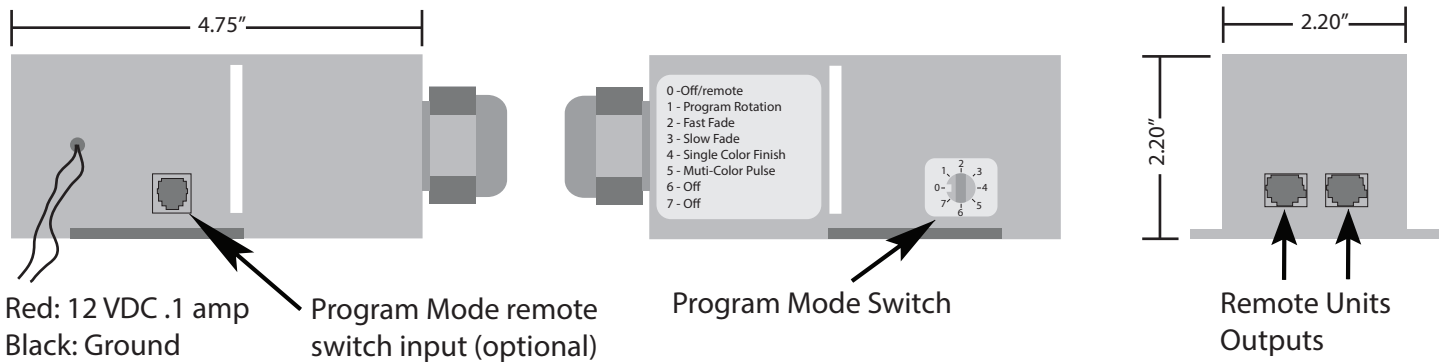

Red: 12 VDC .1 amp
Black: Ground


Program Mode remote
switch input (optional)

Program Mode Switch

Remote Units
Outputs

Install the Master Unit in any location with a simple two wire hookup. The Master Unit can be used alone or with additional Remote Units. To add Remote Units simply plug a cable and Remote Unit into either or both outputs of the Master. This output will power the Remote Unit and the selected program mode of the Master Unit will determine the program mode of the Remote Units.

Remote Unit

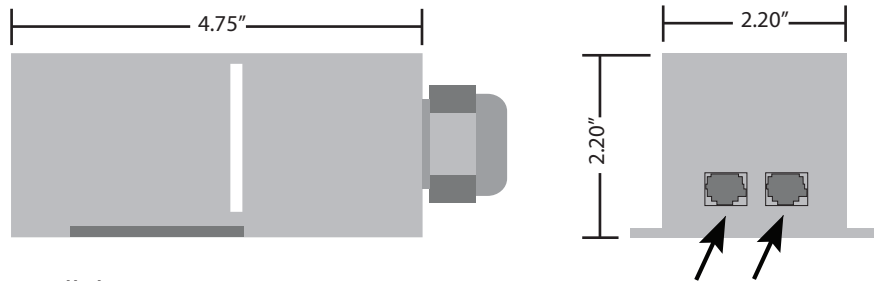

Install the Remote Unit in any location. The Remote Unit can only be used if there is at least one Master Unit connected. The Master Unit will power the Remote Unit and the selected program mode of the Master Unit will determine the program mode of the Remote Unit.


Either port can be used for:

Input from Master

Input from Remote Unit

Output for additional
Remote Unit

Auxiliary Program Switch

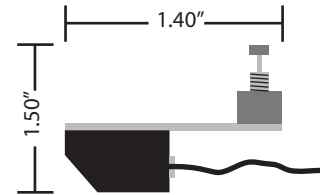

Install the Remote Program Mode Switch in any location. Plug the Remote Switch into the Master Unit and set the Master Units's Program. With the remote switch connected the Master unit switch is inoperable and requires to be set to 0. 1/4" mounting hole is required.

 INFINITE INNOVATIONS

WWW.INFPARTS.COM - 1-800-362-6224