
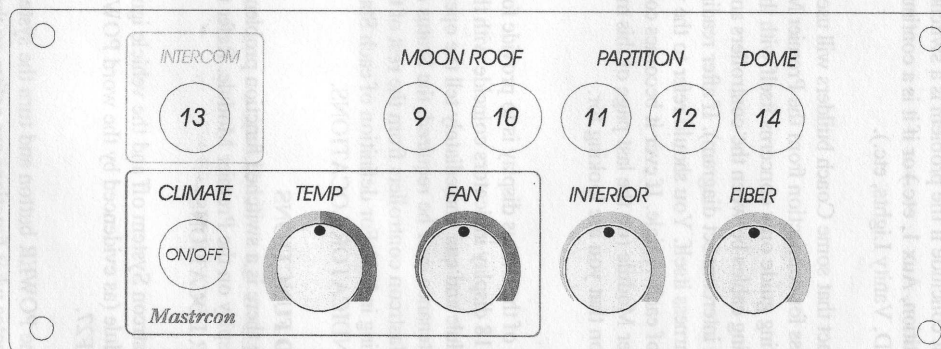


STATUS DISPLAY INDICATOR LOCATIONS


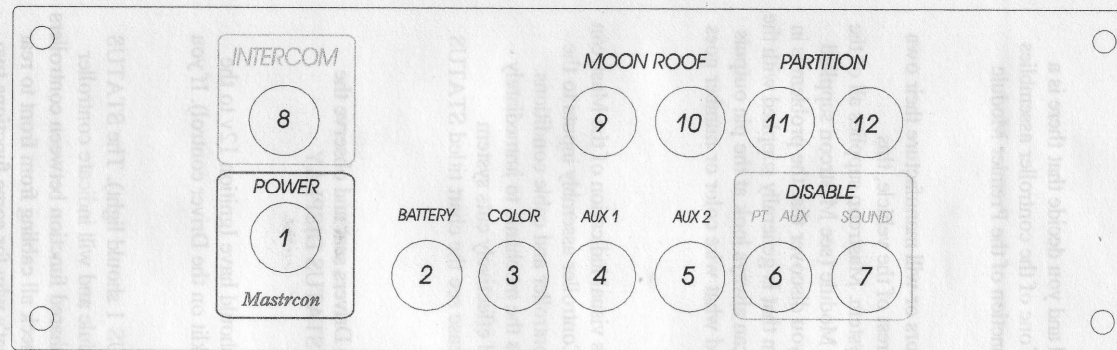


STATUS15: 12VA INPUT PRESENT AT PREMIER MODULE
 STATUS16: AC ACTIVE ON PREMIER MODULE
 STATUS17: HEAT ACTIVE ON PREMIER MODULE
 STATUS18: IGN 12V PRESENT AT PREMIER MODULE




MASTRCON, INC.
 C2003 R03STAT.CDR

03 PREMIER

 Mastrcon
Premier Module
Copyright 2003 Mastrcon, Inc.

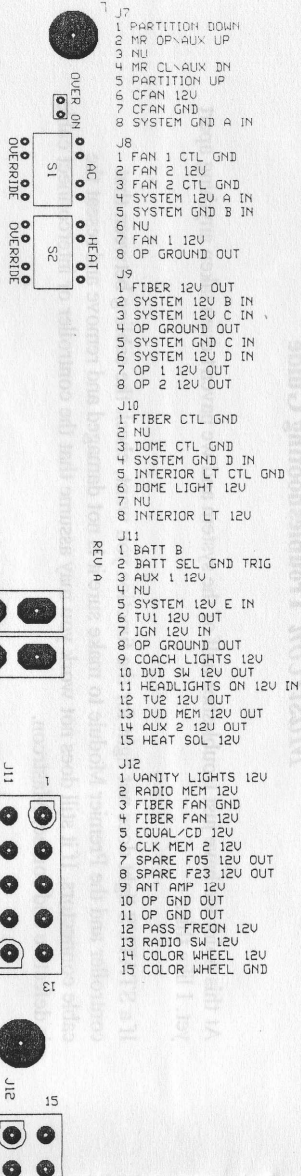

J2 DC

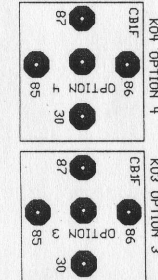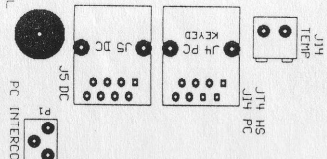 

J13
1 GND
2 DOOR OPEN IN
3 GND
4 GND
5 GND
6 GND
7 GND
8 GND
9 GND
10 GND
11 GND
12 GND
13 GND
14 GND
15

FUSES
F1 CLIGHT 10 AMPS
F2 AUX 1 5 AMPS
F3 BATT SEL 1 AMP
F4 TUI 5 AMPS
F5 COLOR WHEEL 5 AMPS
F6 AUX 2 5 AMPS
F7 HEAT SOL 5 AMPS
F8 TUI 5 AMPS
F9 RADIO SW 5 AMPS
F10 CFAN 15 AMPS
F11 MAIN 1 5 AMPS
F12 CONTROL 5 AMPS
F13 FIBER 10 AMPS
F14 DOME LIGHTS 10 AMPS
F15 CIG LIGHTER 15 AMPS
F16 RADIO MEM 10 AMPS
F17 CLK MEM 2 5 AMPS
F18 ANT AMP 5 AMPS
F19 PASS FREQN 5 AMPS
F20 EQUAL/CD 5 AMPS
F21 ULIGHTS 5 AMPS
F22 FIB FAN 5 AMPS
F23 SPARE 5 AMPS
F24 DUB MEM 5 AMPS
F25 DUB SW 5 AMPS
F26 BATT B 5 AMPS
F27 IGN 1 AMP
F28 INTERIOR LTS 5 AMPS
F29 FAN 2 20 AMPS
F30 FAN 1 20 AMPS

F01 OPTION 5 AMPS
F02 OPTION 5 AMPS
F03 OPTION 5 AMPS
F04 OPTION 5 AMPS
F05 OPTION 5 AMPS

CIRCUIT BREAKERS
B1 PARTITION 15 AMPS
B2 MR/AUX 15 AMPS

